


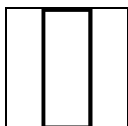

PW600

POWER WIPES AC-PRIMER



Ready for use

Air drying:
15-20' at 20°C

DESCRIPTION

Single-use wipes free from chromates for the treatment of metal surfaces and its alloys.

USE

Suitable as an anticorrosive treatment on steel, aluminium, galvanised steel sheet of the car field. Especially recommended in the high efficiency «POWER –TECH» processes in combination with MACROFAN HS GREEN-TECH FILLER.

CHARACTERISTICS

PW600 creates a coating on the metallic surface, which increases the adhesion and the corrosion resistance of the painting process.

- Ease of use
- No pot life
- No overspray and no waste
- High productivity compared to the processes requiring a primer application
- Chrome-free
- Very low VOC

SUBSTRATE PREPARATION

Sand the surface with suitable grit papers (P120/180) or with finer grit papers (P240/320) if in combination with wet-on-wet processes.

Suitably degrease the surface with anti-silicone thinner 00695 SILICONE REMOVER SLOW.

The surface must be clean and dry before wiping with PW600.

APPLICATION

Pull out only one wipe and wipe the substrate with cross passes, taking care of moistening the surface well.

The surface must be wet for at least one minute.

NOTES:

- The container must be immediately closed to avoid the other wipes dry.
- The colour/aspect change of the metallic surface and its opacification show the correct application.
- It is recommended to use the personal protective equipment such as rubber gloves, glasses and clothing for skin protection.
- Do not put the used wipes in the original pack again, but store them, if still wet, in a container or a plastic bag for a maximum of 12 hours.

DIR 2004/42/CE: Preparatory and cleaning IIB/a – VOC ready for use 850 g/l
This product ready for use contains at most 13,5 g/l VOC.

DRYING TIME

Air drying at 20 °C:

When the substrate has gone completely matt overapply with the filler within 15-20 min.

OVERCOAT WITH

All 2-pack polyacrylic fillers within our product range, such as MACROFAN HS GREEN TECH FILLER and MACROFAN AP AUTOLEVEL PRIMER.

Do not overapply polyester fillers, one- and two-pack putties, one-pack fillers and Energy Spray Line.

OBSERVATIONS

Keep the product tightly closed in its original container and avoid changes in temperature.

Keep away from frost that damages its efficiency irreparably.

Turn the container regularly in order to allow the liquid to wet all wipes in a uniform way.

TECHNICAL DATA SHEET N° 0709-GB
UPDATED 11/2019

All information contained in this data sheet is the result of carefully controlled tests and is correct to the best of Lechler's knowledge at the time of issue. Since conditions of use are beyond the control of the manufacturer, information contained herein is without warranty, implied or otherwise, and final determination of the suitability of any information or material for the use contemplated and the manner of use is the sole responsibility of the user. FOR PROFESSIONAL USE ONLY.